

ACORN Stairlifts


Measuring for a Stair Lift Guide

It really is very easy to 'measure-up' for your new ACORN Supaglide straight stair lift. All you need is a good quality metal tape measure.

First take a general overview of your stairway layout and decide which side of the staircase the stair lift will be mounted on, when viewed from the bottom. Be aware that the stair lift rail will overhang the top landing by 8" (20cm) and meet the floor at the foot of the stairs 14" (36cm) beyond the 'nose' of the first step.

Take note of any fixtures, such as window sills, hand rails, central heating radiators, doorways etc., that intrude into the stairway area - or could be blocked by the presence of the stair lift. Decide which side of the stairway will be most appropriate for the stair lift, requiring the least amount of disruption - or obstruction. In most cases, it's a fairly obvious choice.

Now that you have decided which side of the stairway the stair lift will be sited, you should measure the staircase

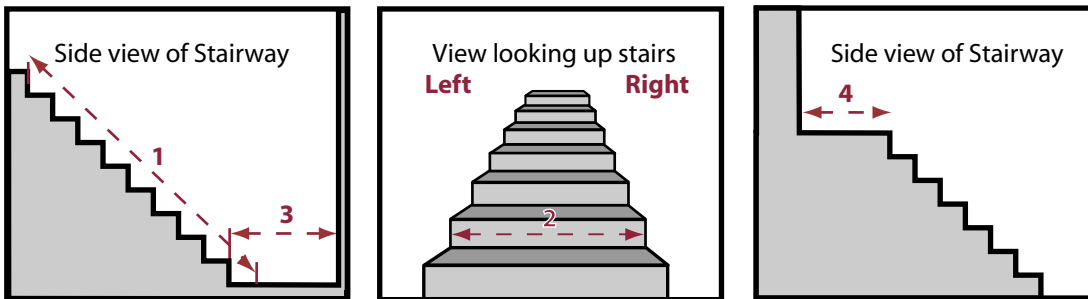

Please specify the units of the dimensions and enter the staircase measurements in the boxes provided

Measurements in:

- cm inches

Side of Staircase: (looking up the stairs)

- left right

1 overall length

2 staircase width

3 bottom clearance

4 top clearance

5 number of steps

Explanation of Measurements

- 1 - Overall Length of Staircase**
This should be a straight measurement from the nose of the top step to the bottom landing.
- 2 - Staircase Width**
You may find that your staircase width varies a little, over the length of the stairway. Record the measurement at its narrowest point.
- 3 - Clearance at Bottom of Staircase**
A minimum of 24" (61cms) is required for this measurement.
- 4 - Clearance at Top of Staircase**
Measure the distance from the nose of the top landing to the nearest obstruction.


Once these measurements are taken that is all that is needed to build a stair lift to fit your staircase!

You may like to think about some of the accessories designed and manufactured to provide comfortable, practical and cost effective solutions for individuals with additional mobility and physical flexibility difficulties, or sometimes for more complex stair configurations.

Accessories:

- Outdoor Model Stair Lift
- Perch Model Stair Lift
- Sit & Stand Frame
- Safety Harness
- Heavy Duty Package
- Extra Wide Seat
- Hinged Rail
- Bridging Platform

For more details, please visit our Web site <http://www.acornstairlifts.com> or call us TOLL FREE 1-866-STAIRLIFT to talk to one of our friendly, experienced customer consultants.

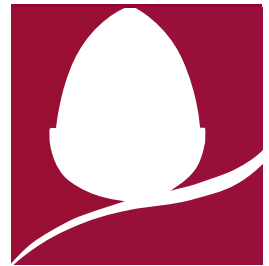

ACORN
STAIRLIFTS

Acorn Stairlifts Inc.
6450 Kingspointe Parkway
Unit 1
Orlando
Florida 32819

Tel: (407) 650 0216
Fax: (407) 650 1764

sales@acornstairlifts.com

www.acornstairlifts.com

Call TOLL FREE 1-866-STAIRLIFT